

## Using the Remote Control - Fig. 1

The remote control may operate in humid environments, but not when placed on wet surfaces.

**Selecting the Suction Speed** position the remote control vertically near the cook top area and rotate clockwise to increase the suction speed, and anticlockwise to decrease the suction speed.

**Turning on the Light**, press the remote control from the top downwards once for suffused lighting, again for full lighting, and again to turn off the light.

If the cooker hood's Control Ball flashes green-orange-red in sequence then replace the battery.

## Remote Control Maintenance - Fig. 2

Clean the remote control using non abrasive detergents. Follow the instructions below in order to replace the batteries for the remote control :

- Using a small screwdriver, raise the cover on the base of the remote control, in order to access the battery compartment.

Remove the battery holder, and replace 4 new batteries type ..394 of 1.5V.


Place the batteries in order in the battery holder (see illustration) taking care to respect the polarities indicated on the base of the upper section of the remote control.

### Warning!

If the remote control doesn't work after installation (yet the control ball works correctly), do the following:

1. Place the remote control on the work surface near the hood.
2. Disconnect the hood from the mains.
3. Reconnect the hood to the mains.

Follow this procedure whenever the remote control doesn't work for no apparent reason (e.g.: dead battery).

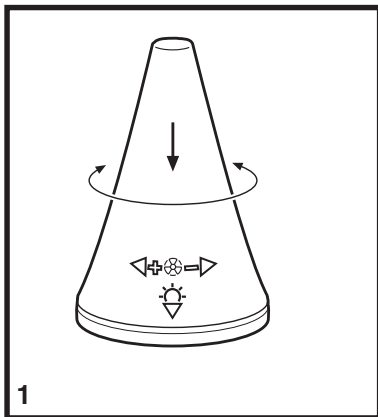

## Att använda fjärrkontrollen - Fig. 1

Fjärrkontrollen fungerar i fuktiga miljöer men inte om den placeras på våta ytor.

**Val av utsugningshastighet:** Placera fjärrkontrollen vågrätt i spiskupans närområde och vrid den medurs för att öka utsugningshastigheten och moturs för att sänka utsugningshastigheten.

**Tända lampan:** tryck på fjärrkontrollens topp, en gång för svagt ljus, en gång till för full belysning och en gång till för att stänga av belysningen.

När Kappans Styrkula blinkar med grönt-oranget-rött ljus skall batteriet bytas ut.

## Skötsel av fjärrkontrollen - Fig. 2

Rengör fjärrkontrollen med rengöringsmedel som inte innehåller slipmedel. Följ instruktionerna nedan för att byta batterier i fjärrkontrollen:

- Ta bort locket på fjärrkontrollens nedre del med en liten skruvmejsel.  
Ta ut batterihållaren och sätt in 4 nya batterier av slaget 394/1.5V.  
Placera batterierna (se illustration) så att polerna stämmer med det som står på etiketten.

### Varning!

Ifall fjärrkontrollen inte fungerar efter installationen (trots att styrkulan fungerar som den ska), gör som följer:

1. Placera fjärrkontrollen på arbetsområdet nära spiskupan.
2. Bryt strömmen till spiskupan.
3. Koppla på strömmen igen.

Följ alltid denna procedur när fjärrkontrollen inte fungerar utan skäl (t.ex.: dött batteri).

